



Can Guard Instructions



APPLICATION:



1. Place the Can Guard over the top of the can



2. Push in the Locking Door



3. Merchandise is now secure & ready to be displayed

REMOVAL:



1. Place the Detaching Well of the Detacher onto the Knob of the Can Guard



2. Pull open Locking Door



3. Pull Can Guard up and off, place in storage location for reuse

SUGGESTED DETACHERS:



Caution: Do not place credit cards, ATM cards or magnetic media of any kind near the Super S3 Key or Multi-Detacher, as this could erase the magnetic strip.